## **Coaxial Within Series Adapter Selection Matrix**

Use this handy chart to locate the desired within series or T type adapter. Simply locate the connector type and configuration in the top row. Then find the connector type and gender in the left hand column. Intersect the row and column to determine availability. If a specific adapter

type is not listed, please visit our website at L-com.com for the latest information or call our technical support group at **800-343-1455** for assistance. Adapters listed are generally intended for use in the RF band.

	SAME GENDER IN SERIES				GENDER CHANGE IN SERIES				
INTERFACE SERIES	STRAIGHT	BULKHEAD	3 PORT TEE (F, F, F)	RIGHT ANGLE	STRAIGHT	RIGHT ANGLE	3 PORT TEE (F, M, F)	3 PORT F or Y	
BNC FEMALE	BA80, BA80E, BIF-CB	BA1087, BA1089, BA1087E	BA832, BA832E			BA240	BA250, BA250E, BIF-TB1, BIF-TB2	BA840 (F), BA845 (Y)	
BNC FEMALE (75 Ohms)	BA016	BA036, BA039	BA019			BA038	BA035		
BNC MALE	BA100								
F FEMALE		BA330A	BA132		BA124	BA126, BA123	BA133		
F MALE	BA122								
MINI UHF FEMALE	BA476					BA470			
MINI UHF MALE	BA478								
N FEMALE	BN120, BIF-CN, AXA-NFNF	AXA-NFNFB, AXA-NFNFB2	BN133			BN121	BN126		
N MALE	BN106, AXA-NMNM			AXA-NMNM90		AXA-NMNF90			
RCA FEMALE		BA400(R, G, B, Y), BA400A							
SMA FEMALE	BA23	BA21, AXA-SFSFB	BA18			BA20	BA19		
SMA MALE	BA22, AXA-SMSM								
RP-SMA PLUG	AXA-RSPRSP								
RP-SMA JACK		AXA-RSJRSJB							
TNC FEMALE		BA2301, BA1090			BA4000				
RP-TNC PLUG	AXA-RTPRTP								
RP-TNC JACK	AXA-RTJRTJ								
UHF FEMALE	BA170	BA406Z	BA303			BA404Z			
UHF MALE	BA280								

The second	6	and the second se		Description			1-9	10-24	25-99	100-249 2	250-499	
1º mar		20	Rolls BNC W	thin Series Adap	ters - 50 Ohr	n						
BA80	BA100	BA240	BA80 BA100 BA240 BA250	Coaxial Adapter Coaxial Adapter Coaxial Adapter Coaxial T Adapter	; BNC Female / Fem ; BNC Male / Male ; BNC Female / 90° er, BNC Female / Ma	ale Male ale / Female	1.95 2.95 3.95 3.95	1.83 2.77 3.71 3.71	1.72 2.60 3.48 3.48	1.60 2.42 3.24 3.24	1.48 2.24 3.00 3.00	
1 1	50 9		BA832 BA840 BA845 BA1087 BA1089	Coaxial Adapter Coaxial Adapter Coaxial Adapter		e / Female	4.05 7.95 7.95 3.95 4.95	3.81 7.47 7.47 3.71 4.65	3.56 7.00 7.00 3.48 4.36	3.32 6.52 6.52 3.24 4.06	3.08 6.04 6.04 3.00 3.76	
BA250	1		True 75 Ohm BNC Within Series Adapters - To Precisely Match All 75 Ohm Coaxial Cables									
1	1	BA832	BA016 BA019 BA035 BA036 BA038 BA038 BA039	Coaxial Adapter Coaxial T Adapt Coaxial T Adapt Coaxial Adapter Coaxial Adapter	; BNC Female / Fem er, BNC Female / Fe er, BNC Female / Ma ; BNC Female / Fem ; BNC Male / 90° Fe ; BNC Female / Fem	ale (Splice) male / Female ale / Female ale Bulkhead male	2.95 4.95 4.95 4.95 4.95 4.95 5.65	2.77 4.65 4.65 4.65 4.65 5.31	2.60 4.36 4.36 4.36 4.36 4.36 4.97	2.42 4.06 4.06 4.06 4.06 4.63	2.24 3.76 3.76 3.76 3.76 4.29	
BA840	50		<b>MRoHS</b> Economy BNC Adapters - 50 Ohm - Cast Metal Components Save on Production Costs									
		BA845	BA80E BA250E BA832E BA1087E	Economy Coaxi Economy Coaxi Economy Coaxi	al Adapter, BNC Fem al T Adapter, BNC Fe al T Adapter, BNC Fe		1.25 1.95 2.95 2.95	1.17 1.83 2.77 2.77	1.10 1.72 2.60 2.60	1.03 1.60 2.42 2.42	0.95 1.48 2.24 2.24	
			<b>™</b> RoHS SMA Within Series Adapters - 50 0hm									
BA016	BA035	BA036	L-com offers the interseries coaxial adapters to help you match any SMA terminated cable to any other. Adapters are machined nickel plated brass, contacts are gold plated.									
BA038	BA039	t Seller	BA18 BA19 BA20 BA21 BA23 AXA-SMSM AXA-SFSFB AXA-SSJRSJB	Coaxial Adapter Coaxial Adapter Coaxial Adapter Coaxial Adapter Coaxial Adapter Coaxial Adapter Coaxial Adapter		e / Female e, 90° ale (Bulkhead) ale	5.75 5.75 5.75 5.75 5.75 5.75 3.49 er 3.99 3.99	5.40 5.40 5.40 5.40 3.35 3.83 3.83	5.06 5.06 5.06 5.06 5.06 3.21 3.67 3.67	4.72 4.72 4.72 4.72 4.72 2.97 3.39 3.39	4.37 4.37 4.37 4.37 4.37 2.62 2.99 2.99	
			AXA-RSPRSP		; RP-SMA Plug / RP-		3.99	3.83	3.67	3.39	2.99	
100		16a		Within Series Ad	· · · · · · · · · · · · · · · · · · ·							
BA80E		BA250E	BA122 BA123 BA124 BA126	Coaxial Adapter Coaxial Adapter Coaxial Adapter	; Type F Male / Male ; Type F Female / Ma ; Type F Male Push- ; Type F Female / Ma	ale, Right Angle on / Female ale Push On, 90°	1.95 1.95 1.25 1.95	1.83 1.83 1.17 1.83	1.72 1.72 1.10 1.72	1.60 1.60 1.03 1.60	1.48 1.48 0.95 1.48	
ale a	6 m	6	BA132 BA133 BA330A	Coaxial T Adapt Coaxial T Adapt	er, Type F Female / I er, Type F Male Pust	Female / Female 1-on / Female / Female emale / Female, (.5/1.3cm D-Ho	2.95 2.95 1.95	2.77 2.77 1.83	2.60 2.60 1.72	2.42 2.42 1.60	2.24 2.24 1.48	
BA19	BA20	BA21 .313" Ø D-hole					-	<b>A</b>				
	New	New	214 0		OF IP		(Mar)	2	to		2	
BA23	AXA-RSJRSJB	AXA-RSPRSP	BA122	BA123	BA124	BA126	BA132	BA	133	BA33	0A	



Connector reference chart A handy listing of popular connectors. L-com.com/ConnectorChart